 





HOW TO PROPERLY CHANGE A FLAT TIRE

www.mechanicustaad.pk
0341-111-68-68

01/ PARK THE CAR ON A FLAT SURFACE

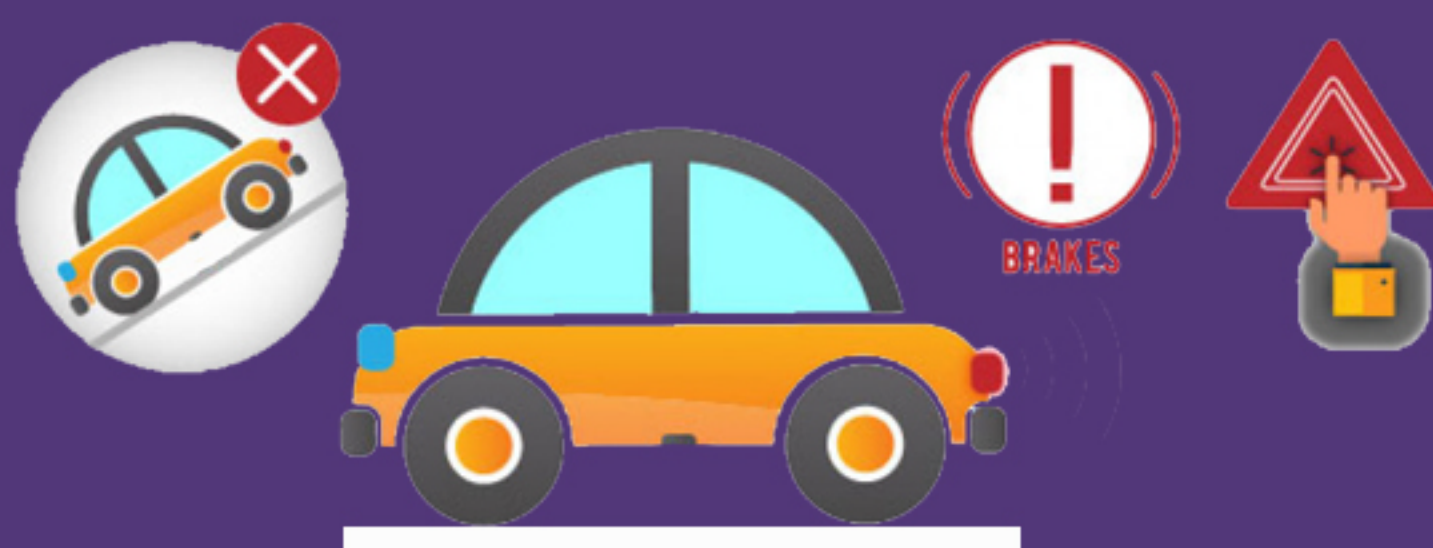

 
02/ LOOSEN UP THE LUG NUTS

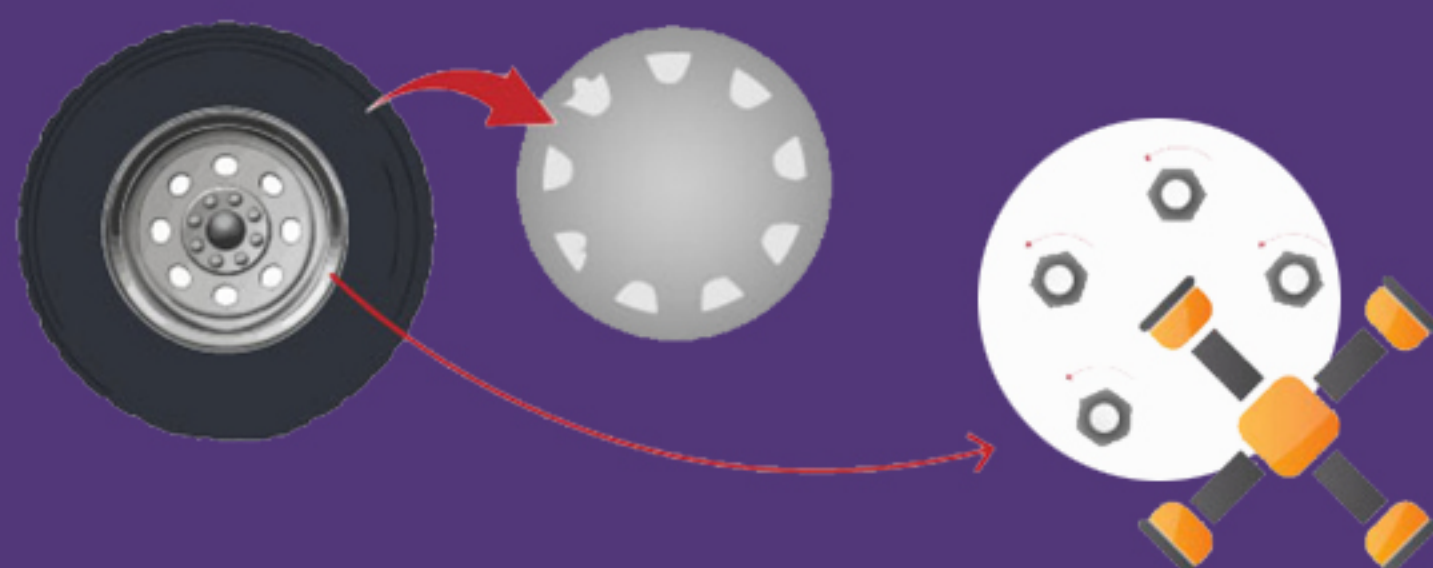

03/ LIFT THE CAR UP USING A JACK



 04/ REMOVE THE LUG NUTS

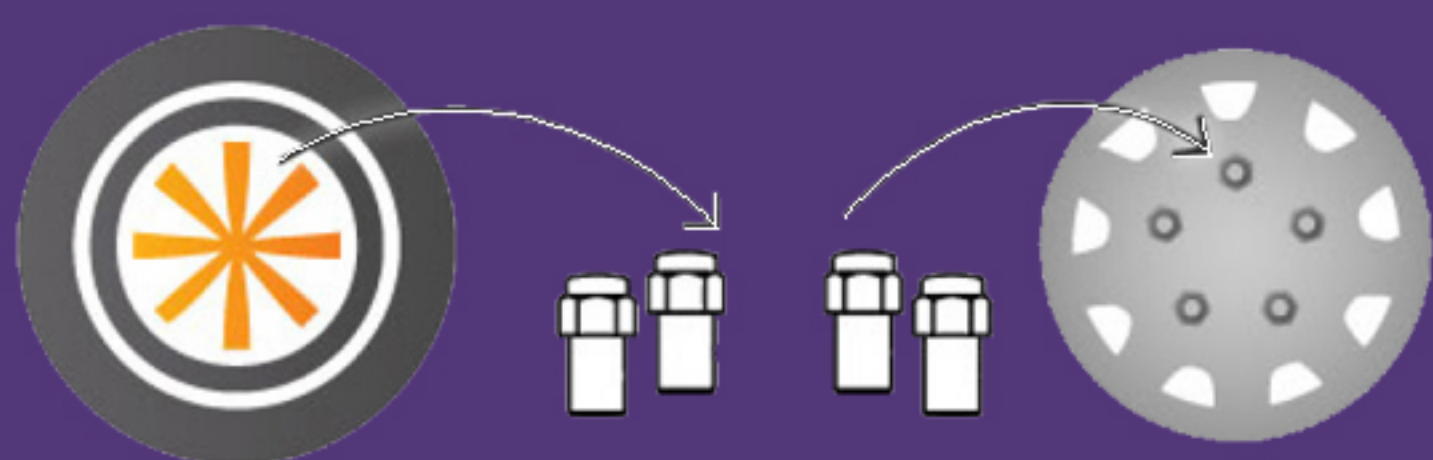

05/ PLACE THE SPARE TIRE ON WHEEL



MECHANIC
USTAAD.PK

 
SEEKHO.

HOW TO JUMP START A CAR

www.mechanicustaad.pk
0341-111-68-68



- 01/ SWITCH OFF BOTH CARS
- 02/ RED ON DEAD AND RED ON DONOR (PLUS +)
- 03/ BLACK ON DONOR AND BLACK ON BARE METAL
- 04/ START THE DONOR FIRST
- 05/ REMOVE IN ORDER
4-3-2-1

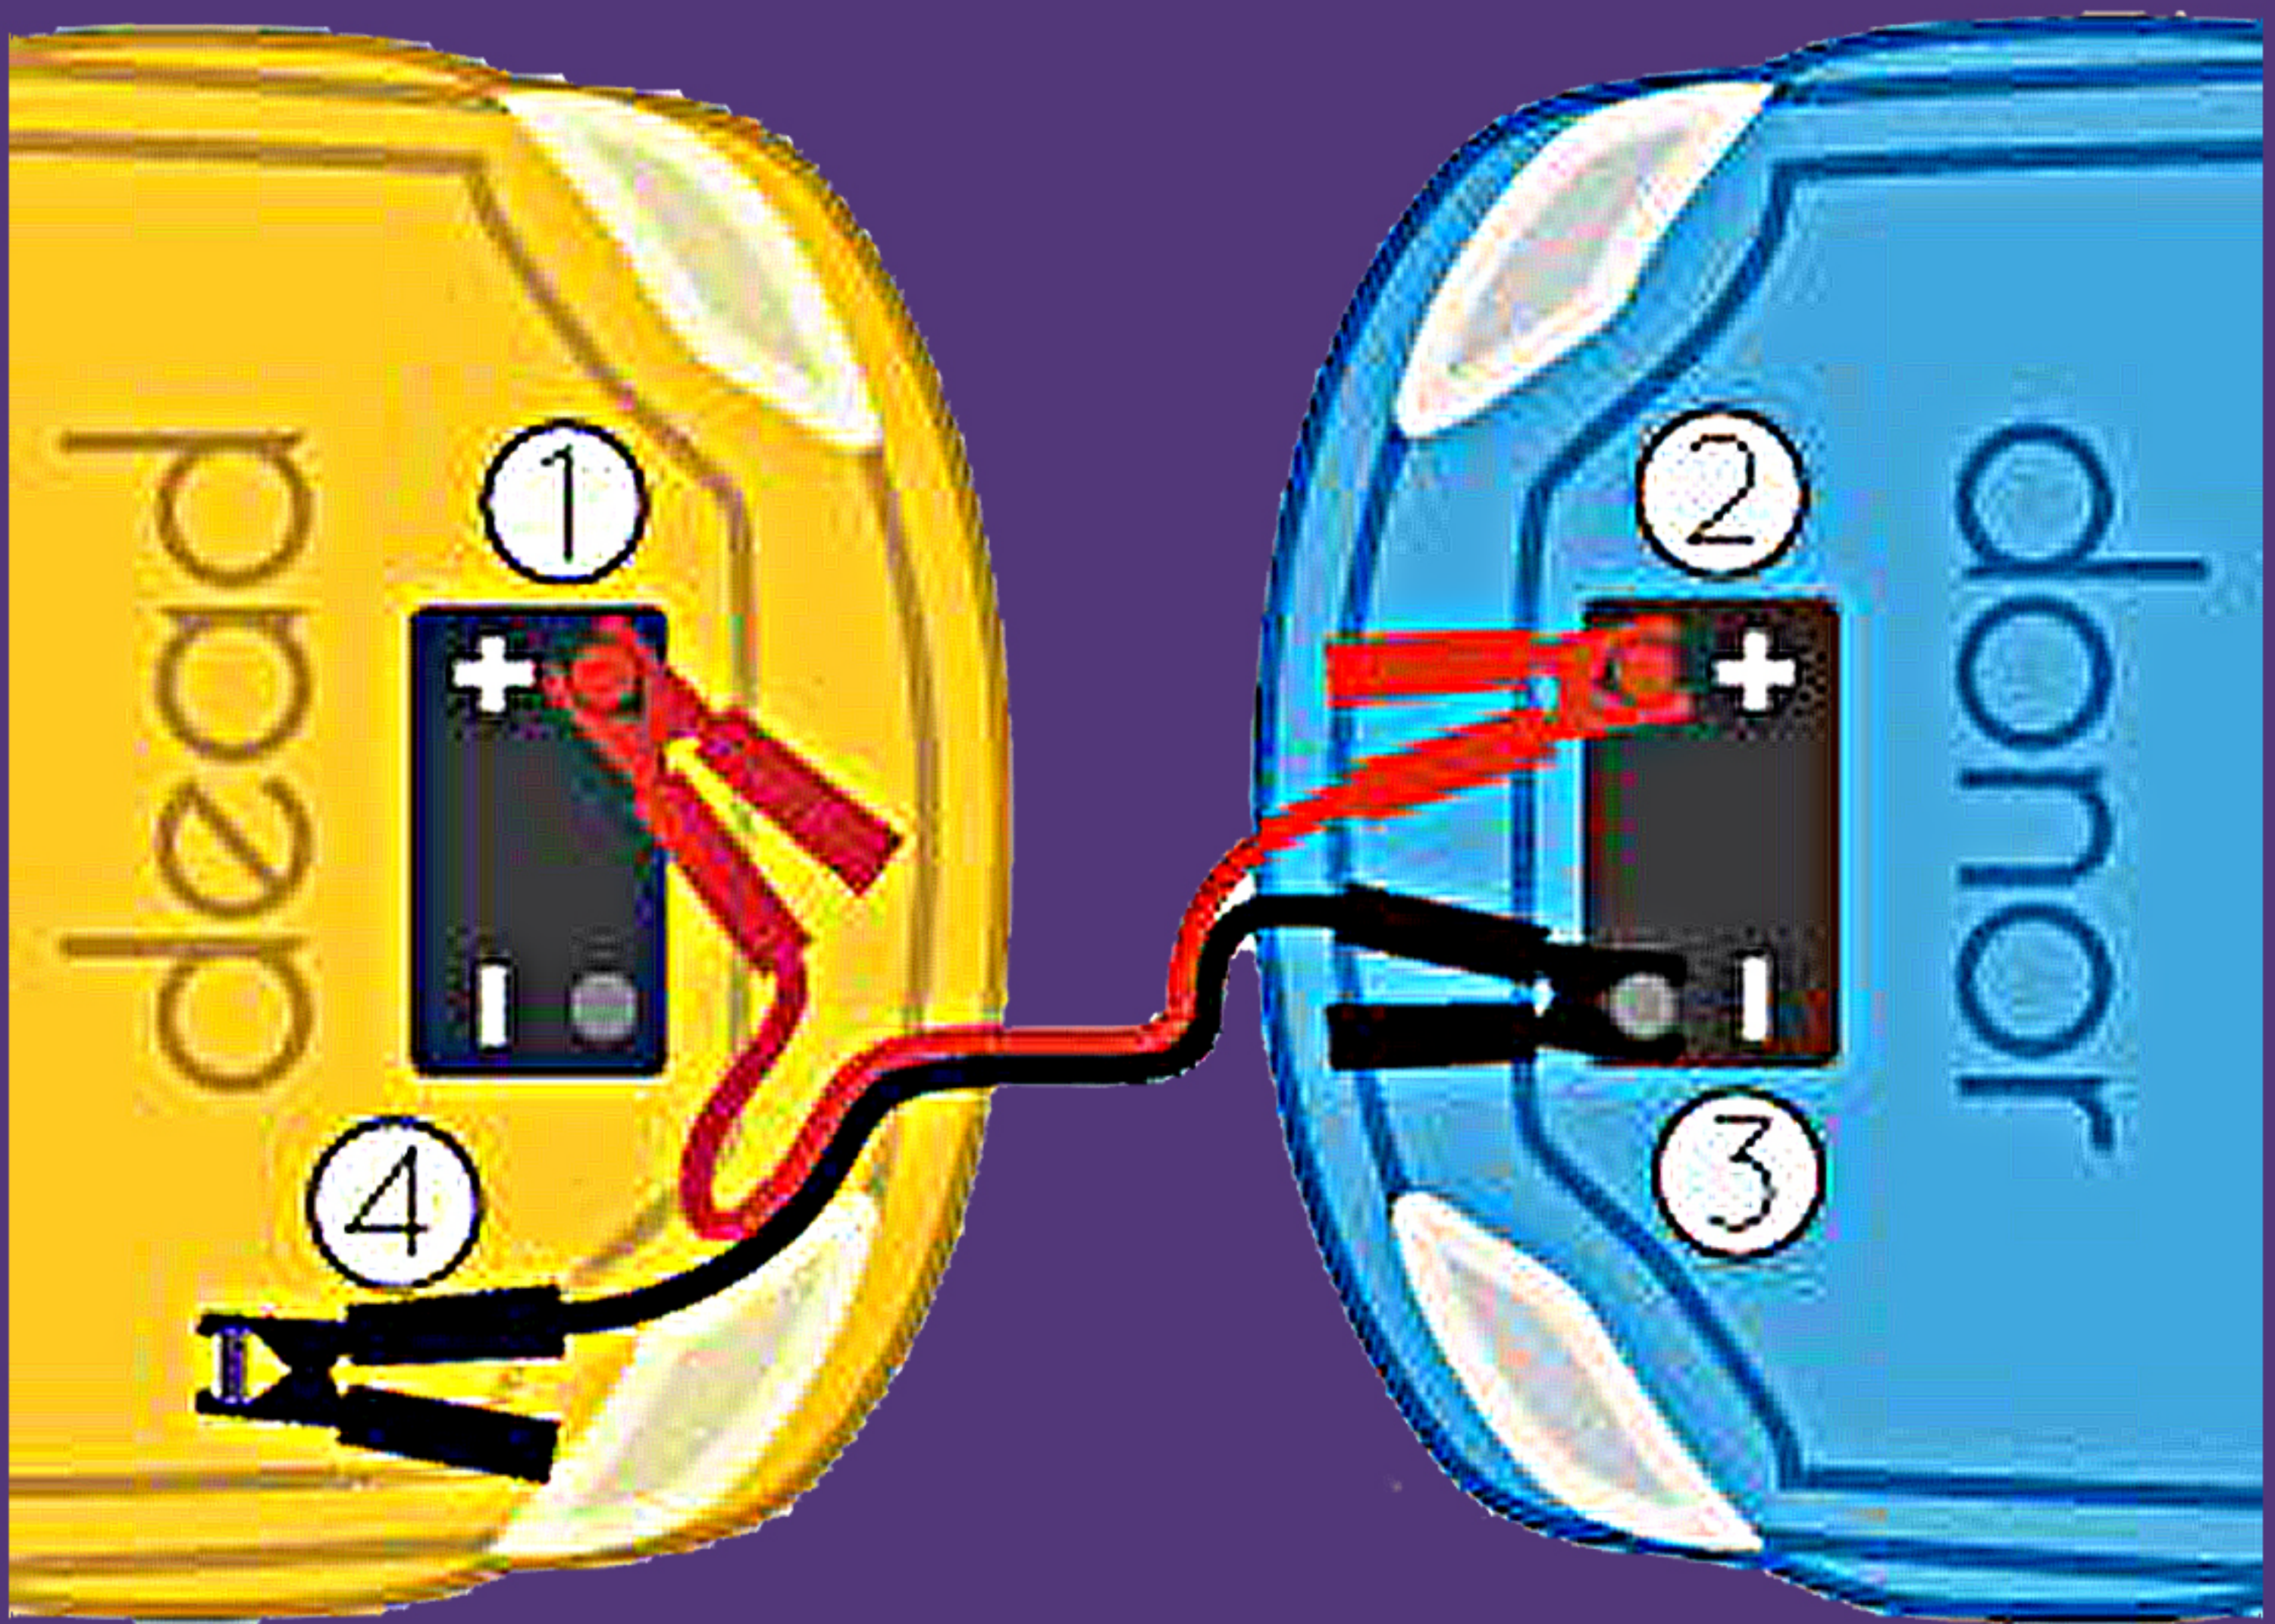

MECHANIC
USTAAD.PK

SEEKHO.



VEHICLE MAINTENANCE GUIDE

www.mechanicustaad.pk
0341-111-68-68

01 / CHECK ENGINE FLUIDS



02 / CHECK FOR FLAT OR PRESSED TIRES



03 / ALWAYS CHECK YOUR DASHBOARD BEFORE STARTING THE DRIVE



04 / REMEMBER TO MAKE SURE YOUR WINDSHIELD WIPERS ARE WORKING



05 / ALWAYS REMEMBER TO FOLLOW THESE STEPS



**MECHANIC
USTAAD.PK**

 
SEEKHO.

BASIC TOOLS FOR EVERY CAR OWNER

www.mechanicustaad.pk
0341-111-68-68



JACK

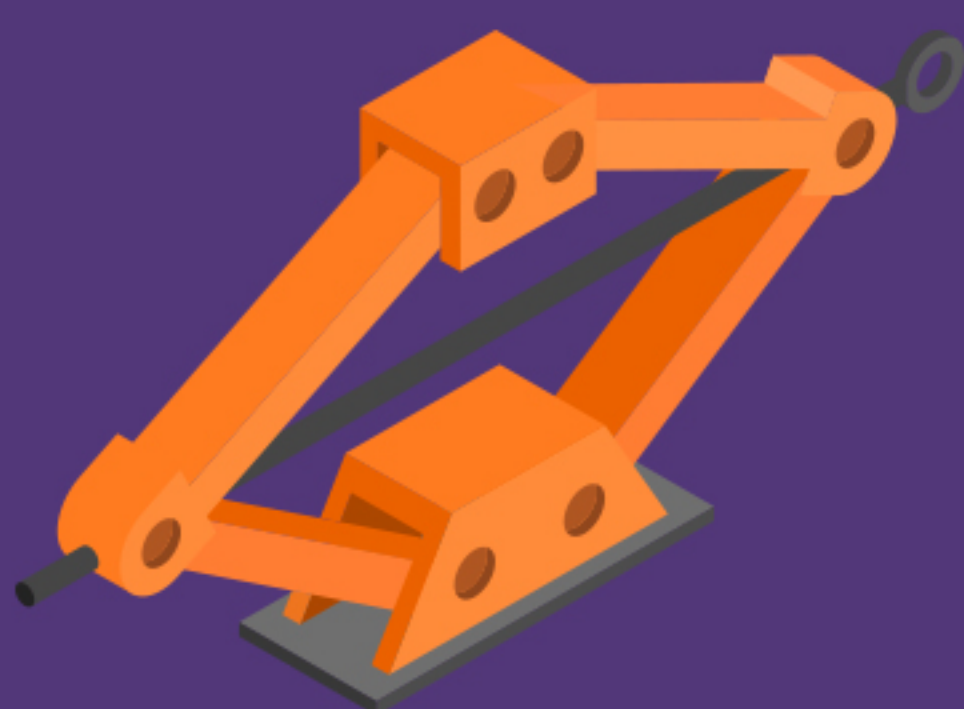


OIL & WATER

FLASH LIGHT



 SCREWDRIVERS

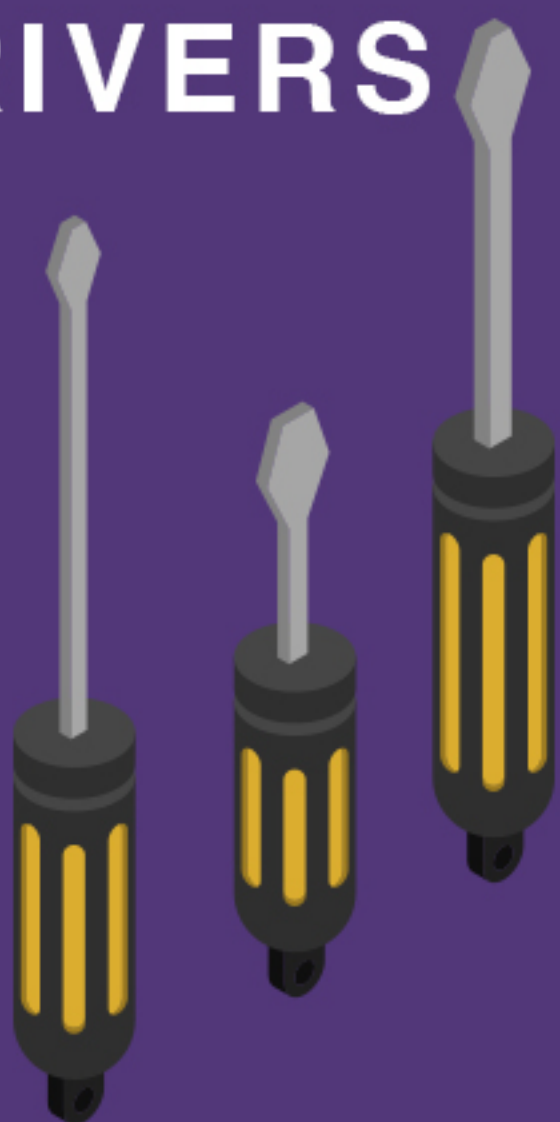


SPANNERS
& WRENCHES

PILLERS



 TOUCHING WIRES & WIRES

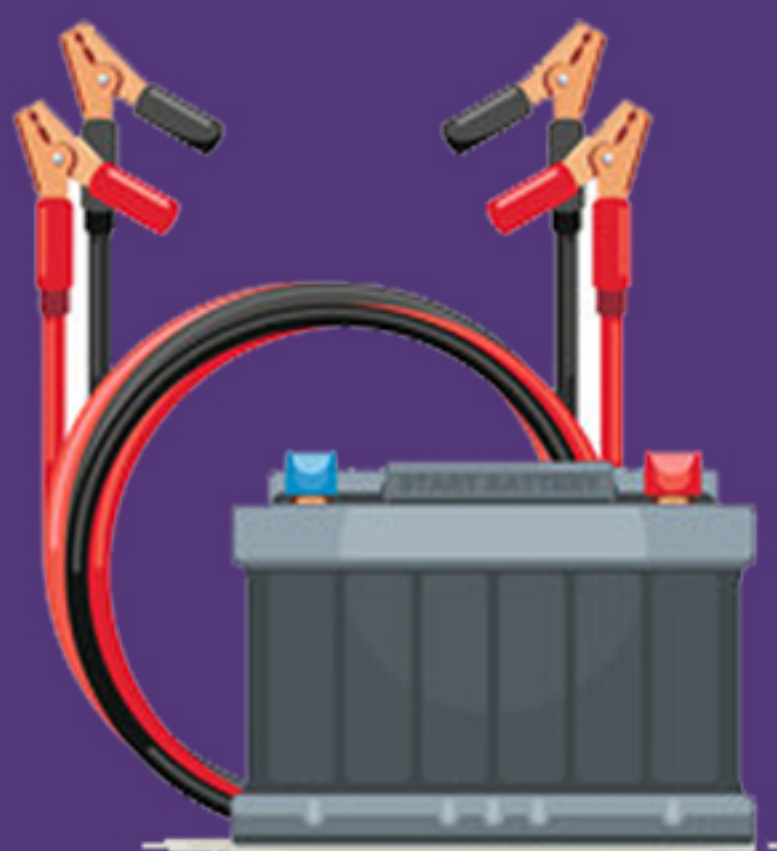

MECHANIC
USTAAD.PK

SEEKHO.

IN CASE OF A CAR FIRE



www.mechanicustaad.pk
0341-111-68-68

01

STOP THE CAR AND TURN OFF



02

GET EVERYONE OUT AND
STAY AWAY FROM THE CAR



03

MOVE ATLEAST 100M AWAY
FROM THE CAR



04

DIAL EMERGENCY NUMBER: 15



05

USE FIRE EXTINGUISHER FOR
LOWER LEVEL FIRES ONLY



MECHANIC
USTAAD.PK

SEEKHO.